





E514693	ELO-SELF-SERV-STAND-SLIM-COUNTERTOP
E514881	ELO-SELF-SERV-STAND-SLIM-FLOOR-TOP
E515260	ELO-SELF-SERV-STAND-SLIM-FLOOR-BASE

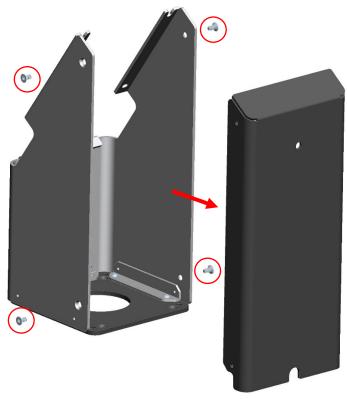

Remove and save (4) screws from stand with provided hex wrench, pull off rear cover.

For Floor Stand, skip to step **5** For Countertop Stand, continue to step **2** 2

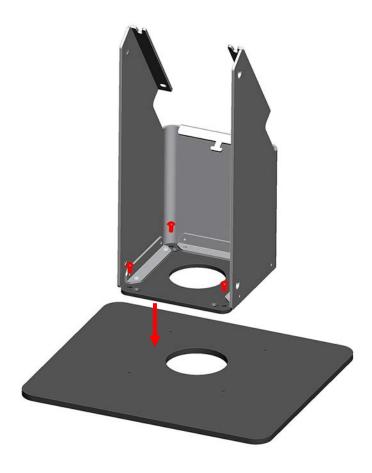

Attach head to counter top plate using (4) screws from bag "I".



Assemble (2) screws from bag "I" to the top two VESA mount holes on the display. Assemble the display to top slotted holes on stand. Add additional (2) screws from bag "I" to bottom VESA mount holes to secure the display.


4




Route cables through bottom of stand. Attach back cover using screws saved from step 1.

END for Countertop Stand

5

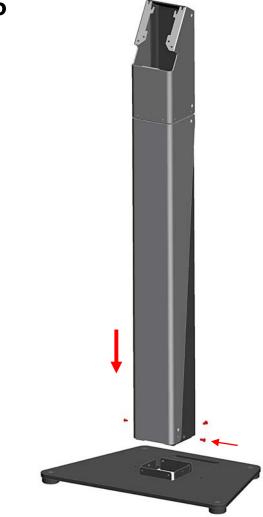

Assemble base plate to tower using (4) screws from bag "K".

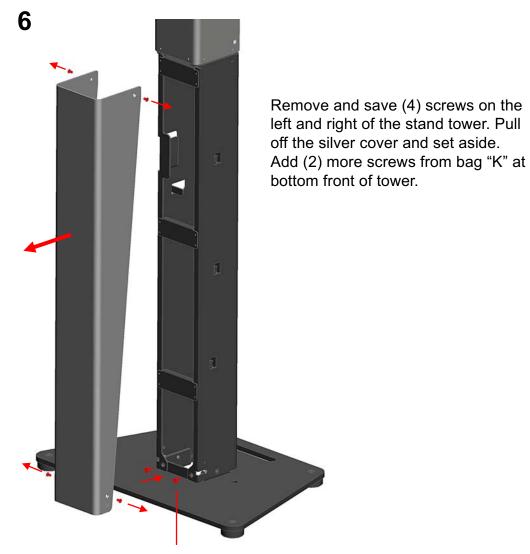


Add (2) more screws from bag "K".




Assemble (2) screws from bag "I" to the top two VESA mount holes on the display. Assemble the display to top slotted holes on stand. Add additional (2) screws from bag "I" to bottom VESA mount holes to secure the display.


8

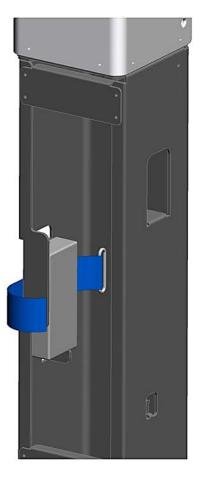

Add power brick into tower using provided strap. Route additional cables through base, tower, head as needed. 9

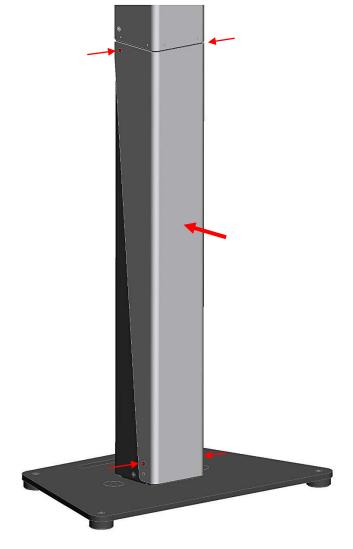

Replace floor stand cover and secure using (4) screws saved from step 6.

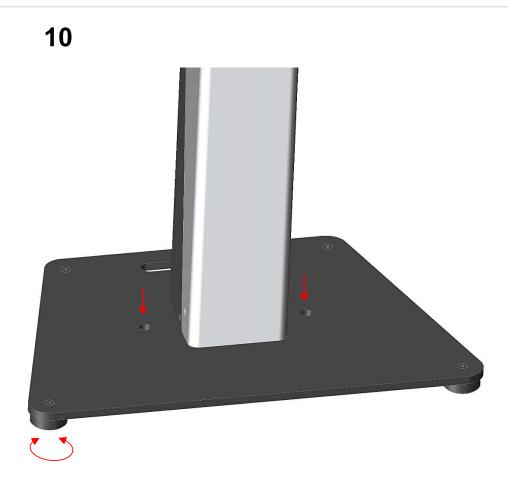

Two bolt holes (14mm [0.55"] dia. X2) are available on top of base to secure stand to floor. Feet can be adjusted in case of uneven surfaces.

END for Floor Stand